





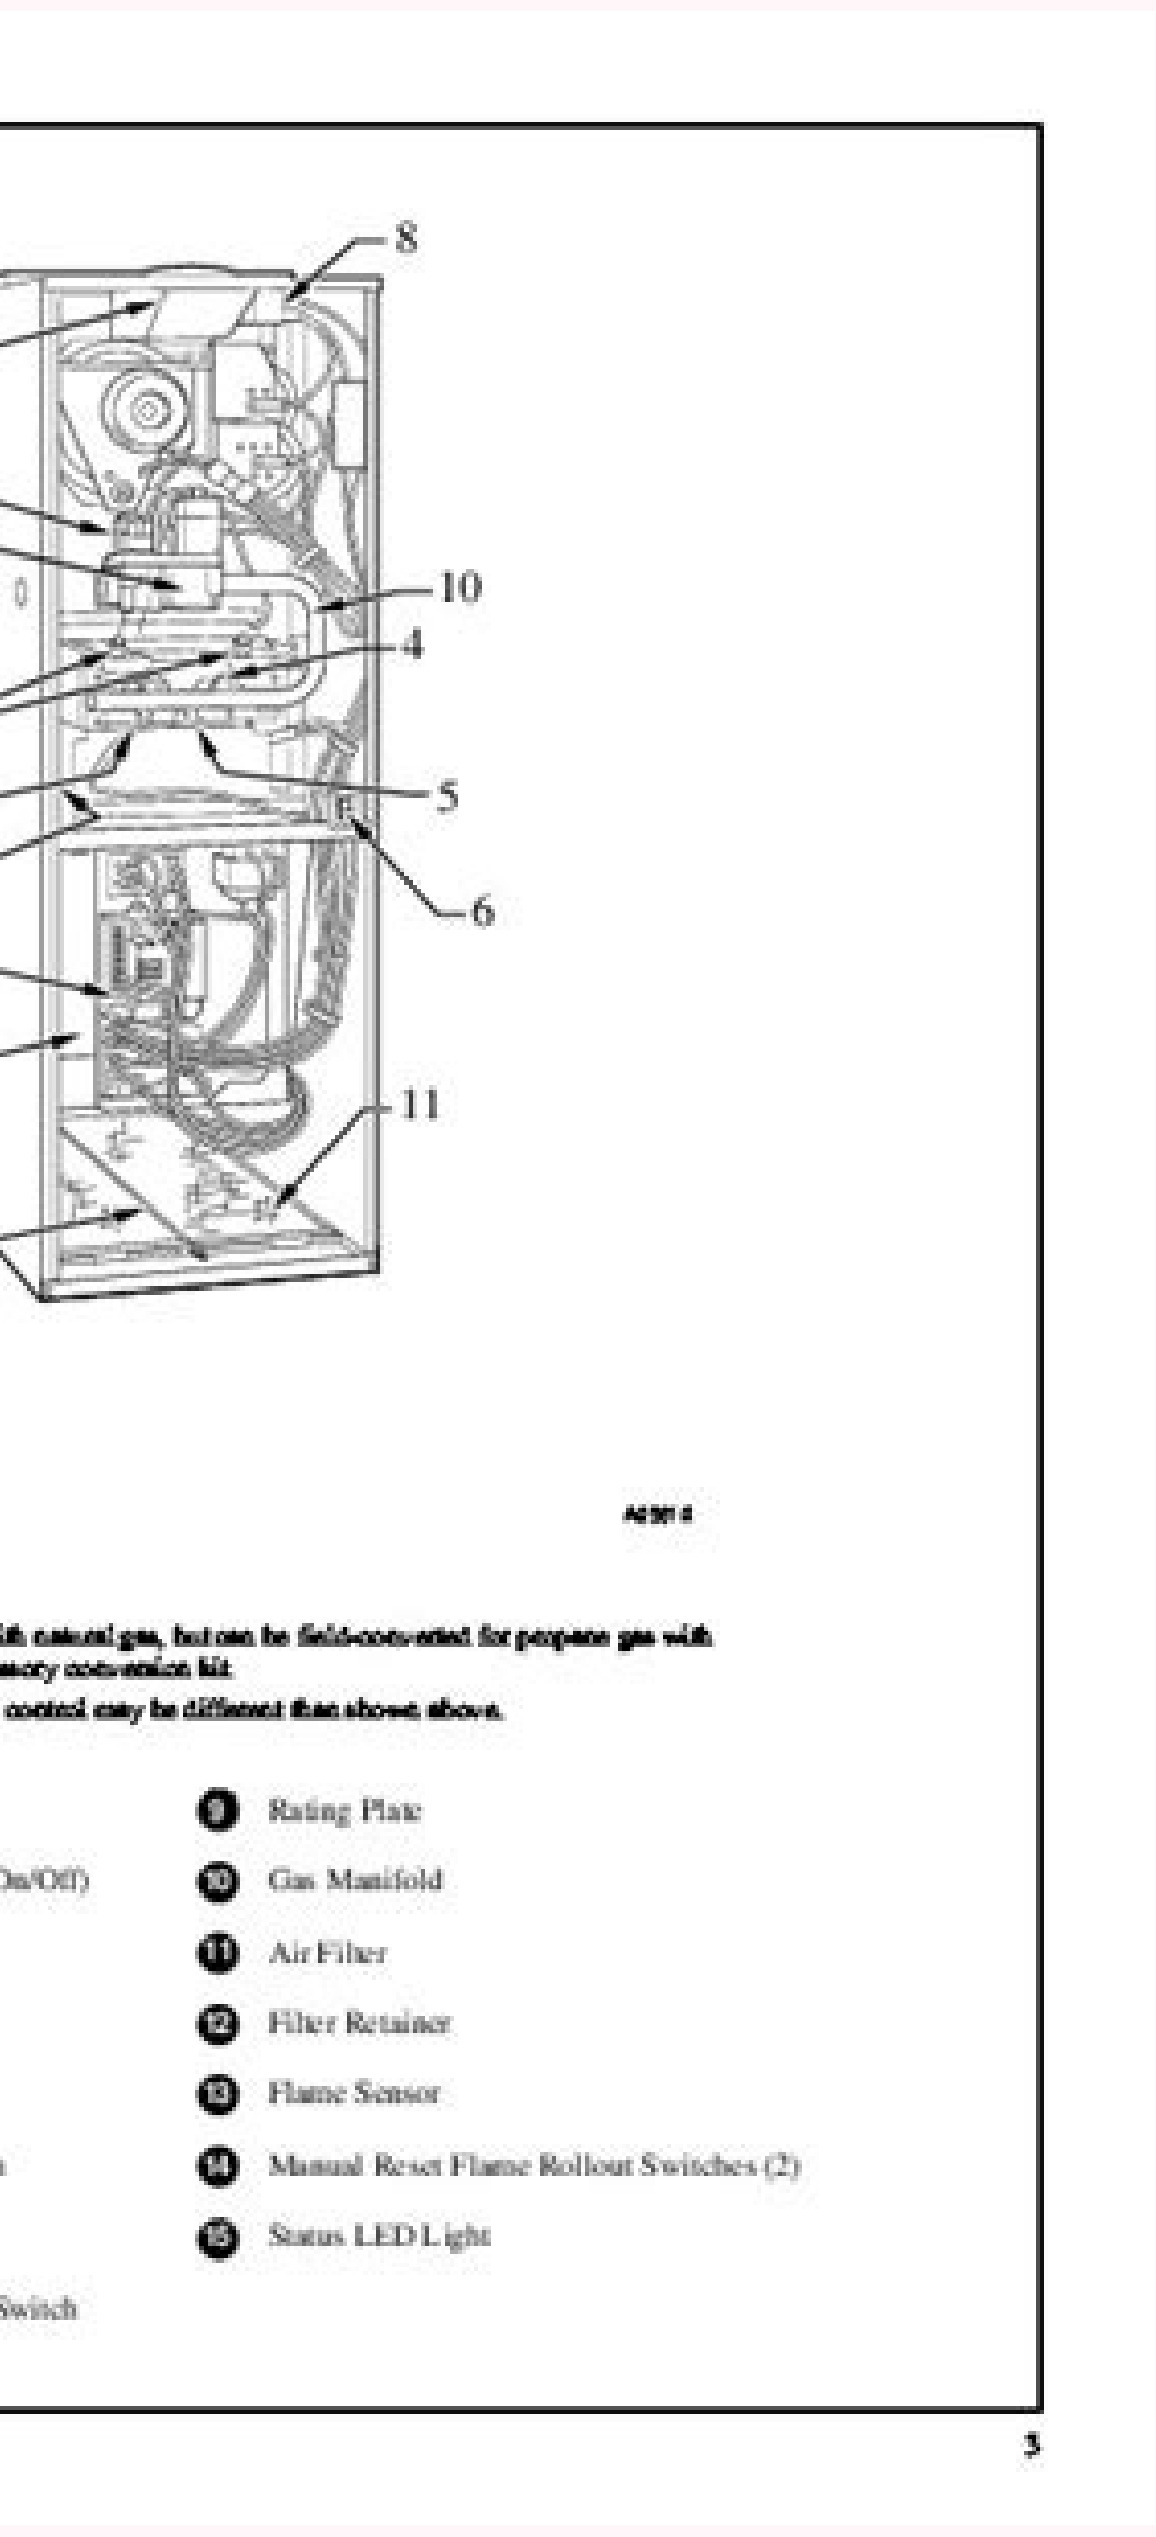

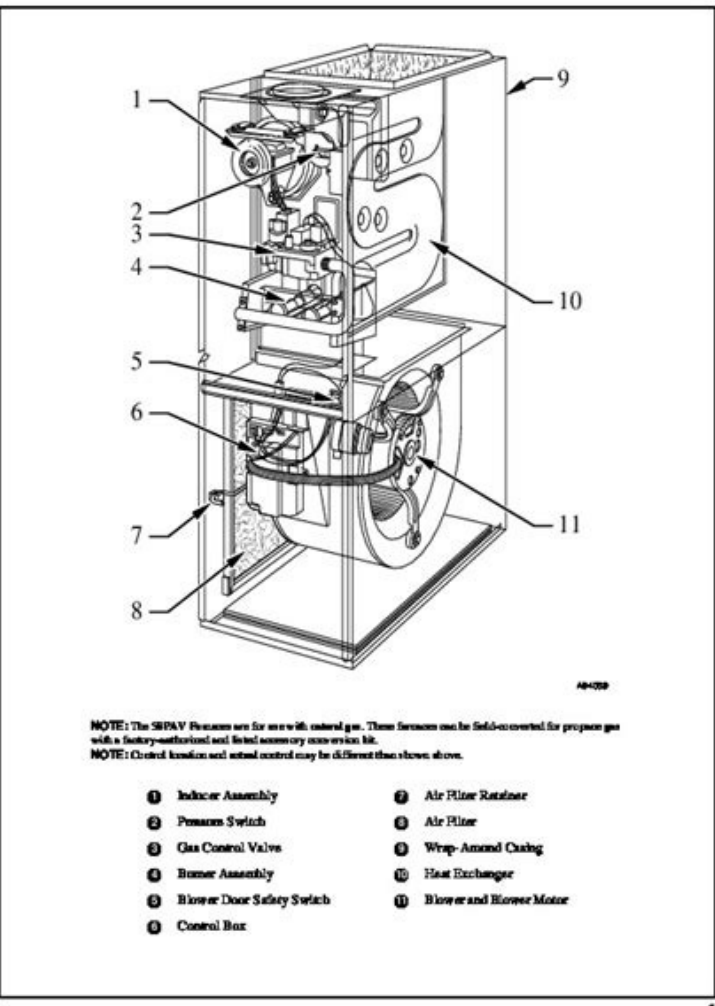

MULTI-POSITION GAS-FIRED FURNACES INDUCED-DRAFT


INSTALLATION INSTRUCTION

Supersedes: 880.89-N3Y (1264)

1980-81, Nov. 1, 1985

009-12581



MODELS: P2MP (U.S.) - STYLE G
P9MP (Canada) - STYLE E
(Upflow/Horizontal)
32-112 MBH OUTPUT

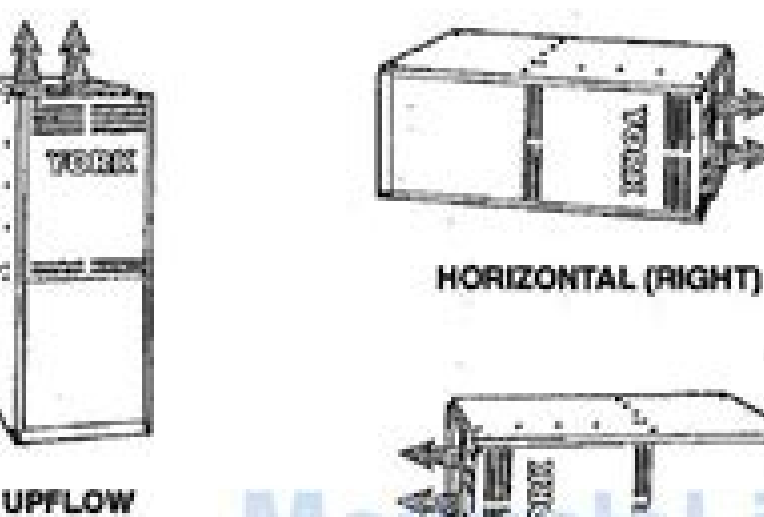

HORIZONTAL (RIGHT)



HORIZONTAL (LEFT)

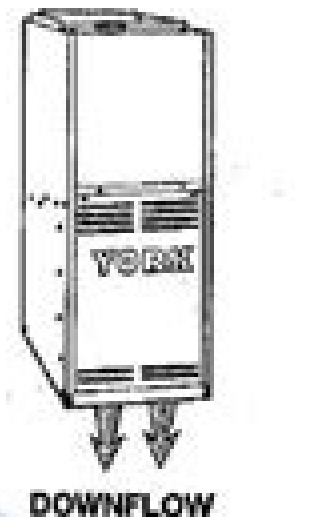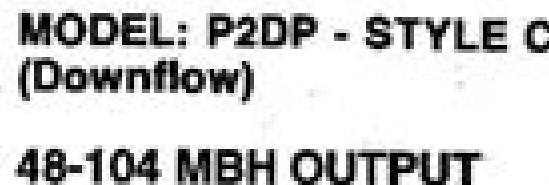

DOWNFLOW

CAUTION

THIS PRODUCT MUST BE INSTALLED IN STRICT COMPLIANCE WITH THE ENCLOSED INSTALLATION INSTRUCTIONS AND ANY APPLICABLE LOCAL, STATE, AND NATIONAL CODES INCLUDING BUT NOT LIMITED TO, BUILDING, ELECTRICAL AND MECHANICAL CODES.

YOUR SAFETY

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Open windows.
- Do not touch any electrical switch;
do not use any phone in your building.
- Extinguish any open flame.
- Immediately call your gas supplier from a
neighbor's phone. Follow the gas supplier's
instructions.
- If you cannot reach your gas supplier, call the
fire department.

WARNING

IMPROPER INSTALLATION MAY CREATE A CONDITION WHERE THE OPERATION OF THE PRODUCT COULD CAUSE PERSONAL INJURY OR PROPERTY DAMAGE.

FOR YOUR SAFETY


- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency or the gas supplier.

Wireless room thermostat

NOTE

1. It is recommended that the 10 way junction box should be used in the first time, suit free wiring.
2. If using the V4043H1080 (1" BSP) or V4043H1106 (28mm), the white wire must be electrically isolated.
3. The same terminal numbers are used on the receiver for both the DT192E and Y650D Wireless Bloom Thermostats.
-

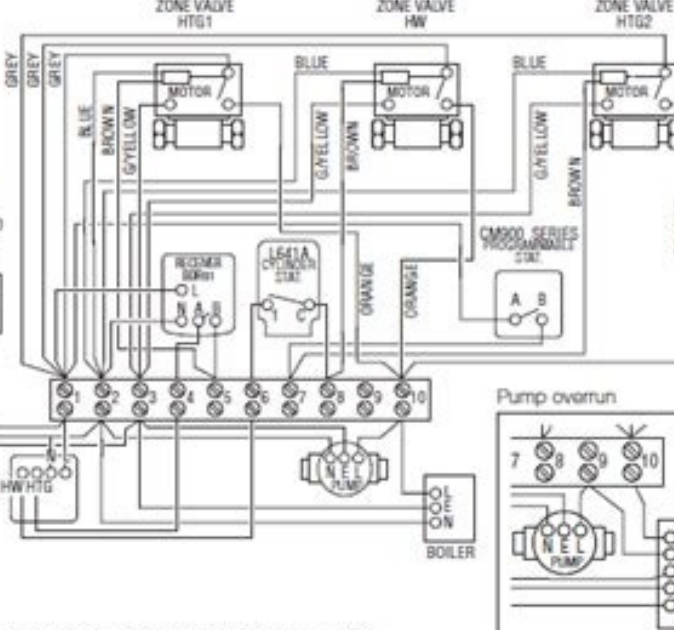

For Frost Protection information - see page 2

[illegible]

[illegible]